


FLAT TRACK

BY LEATHERNECK HARDWARE

Privi-Lock Installation

1. With the door in the closed position use both mounting plates as a template to locate the holes for the screws provided. Either side of the jam can be used to mount the assembly.
2. Place the base plate (no slot only 2 holes) of the assembly onto the jam in a height that is desired for your personal preference. Typically the middle of the opening works best.
3. Mark the inside of each hole onto the jam. (Use as a drilling reference)
4. Drill the holes for the #10 screws provided and according to the type of material you are mounting the assembly to. (Drill hole size may vary)
5. Install the base, latch, plastic spacers, & screws onto the jam to use as a reference for the catch location. (Tighten truss head screws to desired tension for the latch to slide)

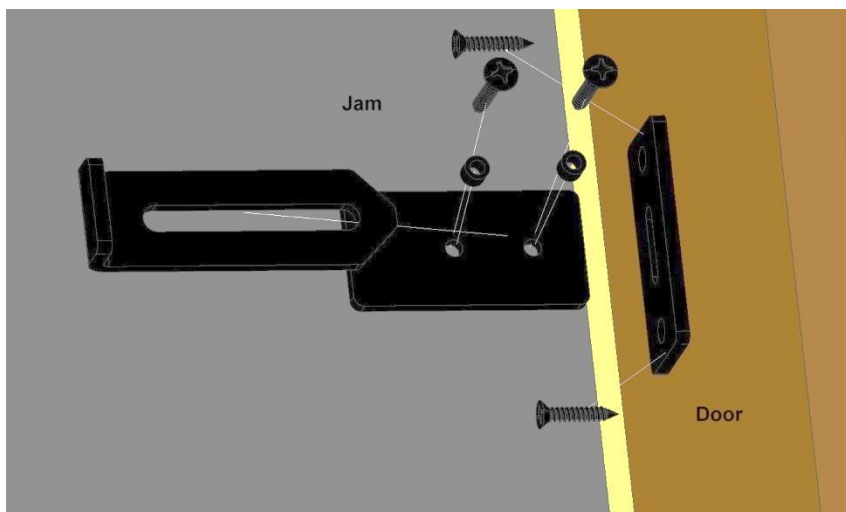

6. Place the catch onto the door in the closed position and mark in the holes of the catch where the screws will be installed.
7. Drill for the #10 flat head screws provided (be sure not to punch thru the outside of the door), then simply secure it with the fasteners and it's complete!